

Sonos™ Digital Music System



Quick Setup Instructions

 
1

Connect speakers and apply power

- > Firmly push the spring-loaded speaker connector post inward to reveal the connection hole.
- > Insert the stripped end of the speaker wire and release. Repeat for the other speaker connections.
- > Make sure the voltage switch is in the proper position (AC 115V North America/230V Europe).
- > Attach the power cord and plug in your ZonePlayer.

Proceed to step 2 when the ZonePlayer Status Indicator on the ZonePlayer's front panel flashes white and the Mute button flashes green.


Mute Button (green)
Status Indicator (white)

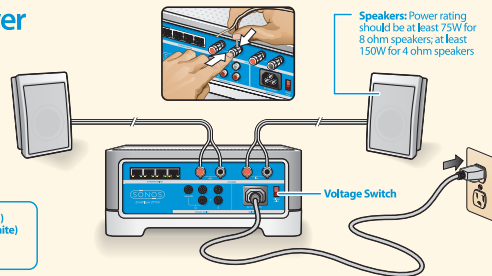

2

Connect the first ZonePlayer to your wired network

 - > Connect a standard Ethernet cable (supplied) from the back of the ZonePlayer to an open port on your router. Do not connect the ZonePlayer directly to your cable or DSL modem unless your modem has a built-in router.
- > If... you don't have a router, or your router has no unused ports, go to <http://faq.sonos.com/norouter> for assistance.
- > Your network must have a high-speed Internet connection.

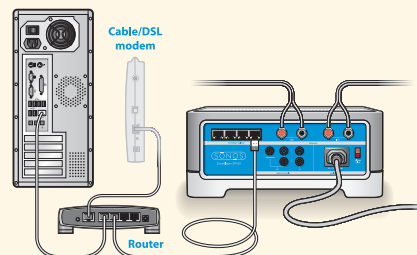

3

Install the software

- > Insert the Sonos System Setup CD-ROM into your computer and follow the prompts to connect the ZonePlayer(s) and set up access to your music files.
- > If... your operating system is not Windows® 2000, Windows® XP or Macintosh® OS X, go to <http://faq.sonos.com/nodcr> for configuration tips.
- If... you have firewall software, it can block the installation and operation of the Desktop Controller software. Go to <http://faq.sonos.com/firewall> for assistance.

Now you can plug your Sonos Controller into the power adapter and follow the prompts on the Controller's screen to add it to your music system.



Sonos System Setup software for use with:

 
- Windows® 2000
- Windows® XP
- Mac® OS X, 10.3 or later



Add more components any time

- > Connect speakers to a new ZonePlayer and apply power as in Step 1. You can use a wired or a wireless connection. Using the Sonos Desktop Controller software, select **Zones > Set Up Zones > Add**.
- > If... you want to use the Sonos Controller to add more ZonePlayers, select **System Settings > Add a ZonePlayer** from the **Music** menu.
- > If... you want to add another Sonos Controller, plug it into the power adapter and follow the prompts on the Controller's screen to add it to your music system.

An important note about wireless performance: While connecting the ZonePlayer wirelessly is incredibly simple, connecting with an Ethernet cable provides the best possible performance. Wireless performance is also dependent upon many environmental factors, including, but not limited to, materials used in the construction of the building, ZonePlayer placement, location and type of furniture, and the presence of other wireless devices. If you experience unsatisfactory wireless performance, please contact us and we'll try to help.

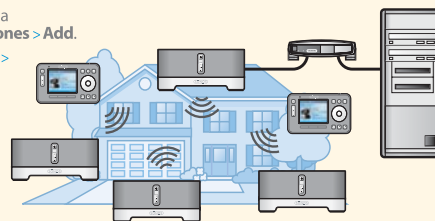

Refer to the online help system included with your Desktop Controller software for additional information on the features, functions, and setup of your new music system. For the latest information on Sonos products or accessories, go to www.sonos.com. For Sonos ZonePlayer service and support information, as well as the latest ZonePlayer software downloads, go to www.sonos.com/support. If you can't solve the problem there, contact us at (800) 680-2345.